

# STEP-BY-STEP GUIDE TO THE CORRECT TIRE PRESSURE WITH THE EEZY 1

**Eezy**  
EXCELLENCE IN SERVICE


## Step 1:

Check the correct tire pressure for your vehicle (the information is usually found on the inside edge of the driver's door, on the door pillar, inside the fuel cap, or in the owner's manual) and remove the valve caps.

## Step 2:

Pay contactlessly with your bank card directly at the display.

## Step 3:

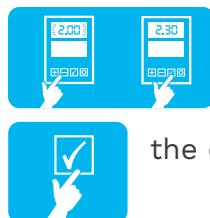

Use the + and – buttons to set the desired tire pressure (max. 5.5 bar) and then press the confirmation button.

## Step 4:

Pull the air hose out of the device.

## Step 5:

Firmly press the nozzle onto the valve of the tire you want to inflate. Inflation starts automatically. When the correct tire pressure is reached, a signal will sound.

Repeat this process for the remaining tires. If you change the preset pressure (e.g. for front and rear axles), press the confirmation button again to start. Once all tires have been checked and inflated, screw the valve caps back on.



For a completely flat tire, the filling process must be started manually. Use the button with the flat tire symbol.



You can check the current tire pressure without payment. Press the nozzle of the air hose onto the tire valve and read the value on the display.

**In case of malfunction:  
+49 (0) 461 9951370**

**Have a safe trip!**

Here you will find information about the [privacy notice](#).